


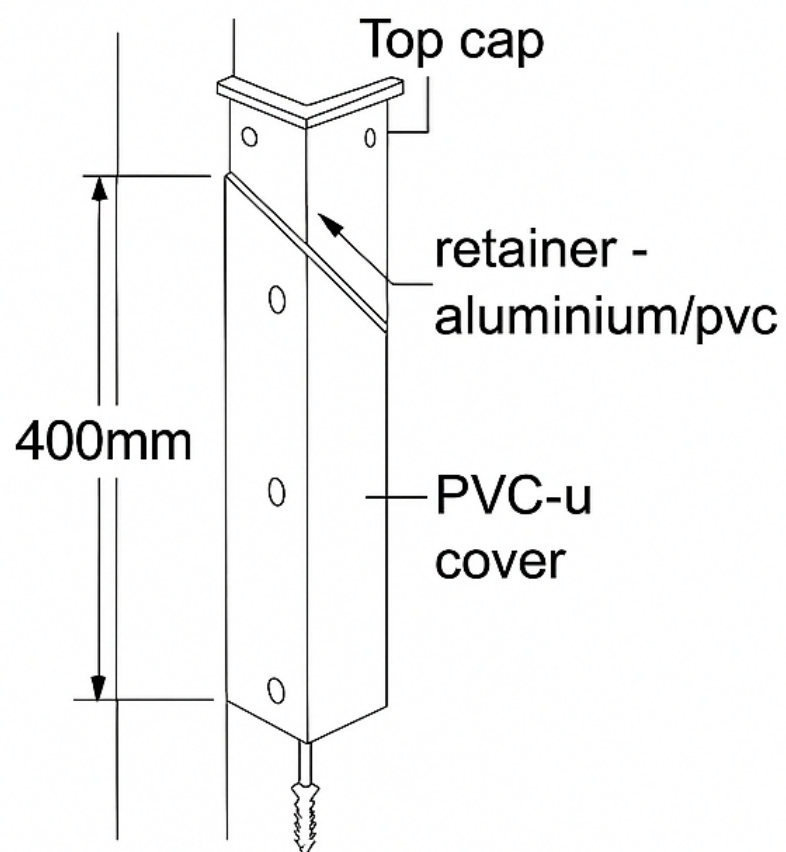

## **PVC-u Corner Guard with Aluminium/PVC-u Retainer**

1. Ensure ambient room temperature is between 16°C-18°C. Allow guards to acclimatise for 24 hours before installation.
2. Inspect the substrate. It must be flat, clean, dry, and sound. Remove any wallpaper behind the guard's location and repair surface if needed.
3. Measure and cut the aluminium/PVC-u retainer and PVC-u cover to the required height. Deburr edges after cutting.
4. Position the aluminium/PVC-u retainer against the wall. Mark drill hole locations (recommended: 400mm spacing, 200mm from each end).
5. Drill wall using appropriate fixings. Secure the retainer with countersunk screws for a flush finish.
6. Align the PVC-u cover and press or snap it over the installed aluminium/PVC-u retainer.
7. Use a soft block or rubber mallet to ensure even contact. Install optional end caps at the top and bottom if provided.
8. When installing multiple guards side by side, align top edges using a spirit or laser level.



[www.nationalstairnosings.co.uk](http://www.nationalstairnosings.co.uk)